



# SNE2000G-P and SNE2000G-S Network Extenders

## Installation Instructions

Document Number SNE2-A2-GN13-00

July 2005

---

### Contents

|                                                         |    |
|---------------------------------------------------------|----|
| Software and Firmware License Agreement .....           | 2  |
| Product Documentation Online .....                      | 3  |
| Introduction .....                                      | 4  |
| Package Contents .....                                  | 4  |
| Connecting to Power .....                               | 5  |
| Configuring the SNE2000G .....                          | 6  |
| Connecting the SHDSL Line .....                         | 7  |
| Connecting the Ethernet Line .....                      | 8  |
| LED Indicators .....                                    | 9  |
| EMI Notices .....                                       | 12 |
| ACTA Customer Information .....                         | 12 |
| Supplier's Declaration of Conformity .....              | 13 |
| Notice to Users of the Canadian Telephone Network ..... | 14 |
| CE Marking .....                                        | 14 |
| Japan Notice .....                                      | 14 |
| Important Safety Instructions .....                     | 15 |

---

# Software and Firmware License Agreement

**ONCE YOU HAVE READ THIS LICENSE AGREEMENT AND AGREE TO ITS TERMS, YOU MAY USE THE SOFTWARE AND/OR FIRMWARE INCORPORATED INTO THE PARADYNE PRODUCT. BY USING THE PARADYNE PRODUCT YOU SHOW YOUR ACCEPTANCE OF THE TERMS OF THIS LICENSE AGREEMENT.**

IN THE EVENT THAT YOU DO NOT AGREE WITH ANY OF THE TERMS OF THIS LICENSE AGREEMENT, PROMPTLY RETURN THE UNUSED PRODUCT IN ITS ORIGINAL PACKAGING AND YOUR SALES RECEIPT OR INVOICE TO THE LOCATION WHERE YOU OBTAINED THE PARADYNE PRODUCT OR THE LOCATION FROM WHICH IT WAS SHIPPED TO YOU, AS APPLICABLE, AND YOU WILL RECEIVE A REFUND OR CREDIT FOR THE PARADYNE PRODUCT PURCHASED BY YOU.

The terms and conditions of this License Agreement (the “Agreement”) will apply to the software and/or firmware (individually or collectively the “Software”) incorporated into the Paradyne product (the “Product”) purchased by you and any derivatives obtained from the Software, including any copy of either. If you have executed a separate written agreement covering the Software supplied to you under this purchase, such separate written agreement shall govern.

Paradyne Corporation (“Paradyne”) grants to you, and you (“Licensee”) agree to accept a personal, non-transferable, non-exclusive, right (without the right to sublicense) to use the Software, solely as it is intended and solely as incorporated in the Product purchased from Paradyne or its authorized distributor or reseller under the following terms and conditions:

1. Ownership: The Software is the sole property of Paradyne and/or its licensors. The Licensee acquires no title, right or interest in the Software other than the license granted under this Agreement.
2. Licensee shall not use the Software in any country other than the country in which the Product was rightfully purchased except upon prior written notice to Paradyne and an agreement in writing to additional terms.
3. The Licensee shall not reverse engineer, decompile or disassemble the Software in whole or in part.
4. The Licensee shall not copy the Software except for a single archival copy.
5. Except for the Product warranty contained in the manual, the Software is provided “AS IS” and in its present state and condition and Paradyne makes no other warranty whatsoever with respect to the Product purchased by you. THIS AGREEMENT EXPRESSLY EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, OR ORAL OR WRITTEN, INCLUDING WITHOUT LIMITATION:
  - a. Any warranty that the Software is error-free, will operate uninterrupted in your operating environment, or is compatible with any equipment or software configurations; and

- 
- b. ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

Some states or other jurisdictions do not allow the exclusion of implied warranties on limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from one state or jurisdiction to another.

6. IN NO EVENT WILL PARADYNE BE LIABLE TO LICENSEE FOR ANY CONSEQUENTIAL, INCIDENTAL, PUNITIVE OR SPECIAL DAMAGES, INCLUDING ANY LOST PROFITS OR LOST SAVINGS, LOSS OF BUSINESS INFORMATION OR BUSINESS INTERRUPTION OR OTHER PECUNIARY LOSS ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE, WHETHER BASED ON CONTRACT, TORT, WARRANTY OR OTHER LEGAL OR EQUITABLE GROUNDS, EVEN IF PARADYNE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY THIRD PARTY.
7. The rights granted under this Agreement may not be assigned, sublicensed or otherwise transferred by the Licensee to any third party without the prior written consent of Paradyne.
8. This Agreement and the license granted under this Agreement shall be terminated in the event of breach by the Licensee of any provisions of this Agreement.
9. Upon such termination, the Licensee shall refrain from any further use of the Software and destroy the original and all copies of the Software in the possession of Licensee together with all documentation and related materials.
10. This Agreement shall be governed by the laws of the State of Florida, without regard to its provisions concerning conflicts of laws.

## Product Documentation Online

Complete documentation for Paradyne products is available at [www.paradyne.com](http://www.paradyne.com).  
Select *Support* → *Technical Manuals*.

To order a paper copy of a Paradyne document, or to speak with a sales representative, please call 1-727-530-2000.

---

## Introduction

Ethernet in the First Mile (EFM) refers to the use of Ethernet starting at the customer premises in subscriber access networks. The family of EFM-based Network Extenders provide an extremely flexible and easy to use solution for providing Ethernet based services to subscribers throughout the service provider's network.

SNE2000G provider and subscriber units can be used in a back to back deployment to provide a point to point configuration. This allows broadband service providers to deploy single DSL lines economically when required for low density geographical areas or during start-up mode. In addition, the subscriber units terminate SHDSL lines from the IP DSLAM family of access multiplexers, including the 12000 and 4000 Broadband Loop Carriers (BLCs) and SHDSL Mini and Micro DSLAMs.

The use of the Provider unit for single SHDSL link deployments provides an easy upgrade path for future multi port deployments, using IP based 12000 and 4000 BLCs. The subscriber unit can remain in place so no changes are needed at the customer premises and the provider unit can be swapped out for an IP-based 12000 or 4000 BLC. To protect investment in the provider units they can be easily converted to subscriber units using the conversion kit and redeployed in the service provider's network.

Because the SNE2000G is fully DSL The Easy Way™ compliant, configuration requirements are removed completely, allowing this device to be installed into the customer premises quickly. The SNE2000G uses the DSL The Easy Way packet-based architecture for optimum throughput and reliability.

## Package Contents

### HANDLING PRECAUTIONS FOR STATIC-SENSITIVE DEVICES

**This product is designed to protect sensitive components from damage due to electrostatic discharge (ESD) during normal operation. When performing installation procedures, however, take proper static control precautions to prevent damage to equipment. If you are not sure of the proper static control precautions, contact your nearest sales or service representative.**




Unpack and Inspect the Equipment. The following components should be included:

- 1 SNE2000G
- 1 Power supply


If there is any visible damage, do not attempt to connect the device. Contact your sales or service provider.

# Connecting to Power

Plug the power supply into the Power Adapter port on the back of the SNE2000G and connect it to your power source.

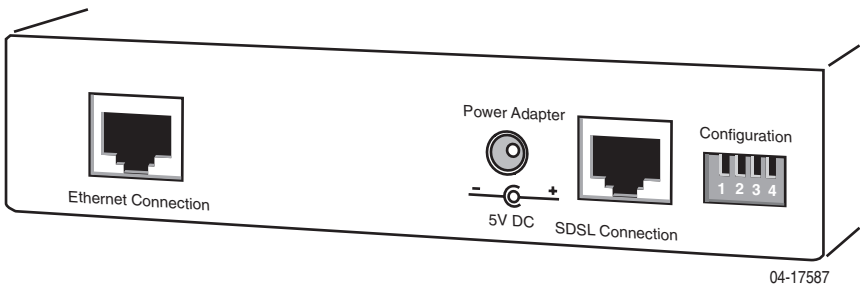

Verify that the Power LED on the front of the SNE2000 is illuminated.

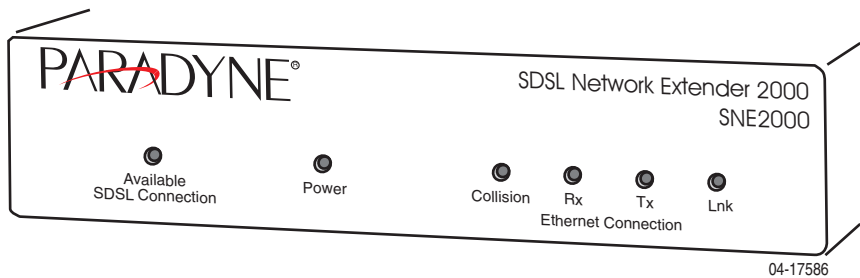

Upon startup, the Ethernet link will remain disabled (as indicated by solid illumination of the Ethernet Rx, Tx, and Lnk LEDs) until the SHDSL connection has been established.

---

# Configuring the SNE2000G

Configuration switches for the SHDSL port are on the back of the SNE2000G, numbered from left to right, 1-4.

## Bandwidth (SNE2000G-P Only)

Switches 1–3 on the SNE2000G-P provide eight bandwidth options for the SHDSL port. Distance capabilities listed in the following tables assume the use of 26 American Wire Gauge (AWG) cable. Connections made with cable of a heavier gauge will link up at greater distances. Your SNE2000G may not link up if the cable is in poor condition or if the cable distance is greater than a particular bandwidth will support; if a link is achieved under such conditions, it may have a low data rate.

**Table 1. SNE2000G-P Bandwidth and Distance Options**

| Switch Position |      |      | Bandwidth<br>(kbps) | Distance |        |
|-----------------|------|------|---------------------|----------|--------|
| 1               | 2    | 3    |                     | Feet     | Meters |
| down            | down | down | 2,320               | 11,300   | 3,444  |
| down            | down | up   | 2,064               | 12,200   | 3,719  |
| down            | up   | down | 1,552               | 12,800   | 3,901  |
| down            | up   | up   | 1,040               | 16,000   | 4,877  |
| up              | down | down | 784                 | 16,800   | 5,121  |
| up              | down | up   | 528                 | 18,400   | 5,608  |
| up              | up   | down | 400                 | 19,400   | 5,913  |
| up              | up   | up   | Adaptive*           | Varies   | Varies |

\* Adaptive mode allows the SNE2000G-P to train up to the best possible speed supported by the SNE2000G-P, the remote modem to which it is connected, and the copper cable pair connecting the two. The maximum distance for an SNE2000G-P in Adaptive mode is 25,400 feet (at 144 kbps).

NOTE: Bandwidth cannot be configured on the SNE2000G-S. Subscriber units determine bandwidth via communication with their partner SHDSL provider units.

---

## Ethernet Duplex Mode

Switch 4 configures Duplex Mode on both the provider and subscriber unit.

The Ethernet link can be configured at either Full Duplex or Half Duplex mode. Although both ends of the Ethernet connection must have the same duplex mode configuration, it is not necessary for partner providers and subscribers to be configured the same; duplex mode does not apply to the SHDSL link.

- Half Duplex Ethernet – Receive and transmit functions are mutually exclusive. Data transmission occurs in only one direction at a time. Packet collisions are not unusual.
- Full Duplex Ethernet – The Ethernet line can receive and transmit simultaneously, effectively increasing bandwidth from 10 Mbps to 20 Mbps and preventing packet collisions.

**Table 2. Duplex Settings Using Switch 4**

| Position | Setting     |
|----------|-------------|
| down     | Half Duplex |
| up       | Full Duplex |

## Connecting the SHDSL Line

An SNE2000G-S must be connected via an SHDSL line to an SNE2000G-P, a Mini DSLAM, a Micro DSLAM, or an IP DSLAM interface module. Neither a subscriber-to-subscriber nor a provider-to-provider connection will function.

### ► Procedure

1. Plug your SHDSL cable into the SHDSL RJ45 port on the back of the SNE2000G.
2. Verify the connection: the SHDSL Connection LED on the front of the SNE2000G will pulse green to indicate the connection is established and operational.

Link up time between local and remote SHDSL network extenders can vary from one to five minutes depending on the quality, gauge, and distance of the copper cable. If cable distance is greater than a particular bandwidth will support, the units may not link up or, if they do achieve a link, may have low data rates.

---

## Connecting the Ethernet Line

### ► Procedure

1. Plug the Ethernet cable into the Ethernet Connection RJ45 port on the back of the SNE2000G.
2. Verify the connection: solid illumination of the Ethernet Connection Lnk LED on the front of the SNE2000G indicates a link has been established, if an SHDSL connection has already been made. If an SHDSL connection has not yet been made, the Ethernet link will remain disabled (as indicated by solid illumination of the Ethernet Rx, Tx and Lnk LEDs) until the SHDSL link has been established.

NOTE: For most applications, the SNE2000G connects to a PC using a straight-through Ethernet cable and to a hub or a switch using a crossover Ethernet cable.

# LED Indicators

**Table 3. LEDs (1 of 2)**

| LED                        | STATE           | INDICATION                                 | ADDITIONAL INFORMATION                                                                                                                                                                                                                                                                                           |
|----------------------------|-----------------|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power                      | Solid Green     | SNE2000G is operational                    | If the Power LED is not illuminated, it is likely the SNE2000G is NOT receiving power, in which case none of the LEDs will be illuminated.                                                                                                                                                                       |
| Available SHDSL Connection | Pulsing Green*  | SHDSL connection is established and active | Traffic is flowing.                                                                                                                                                                                                                                                                                              |
|                            | Solid Green     | Problematic SHDSL connection               | A connection exists but there is indication of a problem with the SHDSL line.                                                                                                                                                                                                                                    |
|                            | No Illumination | No SHDSL connection                        |                                                                                                                                                                                                                                                                                                                  |
| Ethernet Collision         | No Illumination | Standard                                   | <p>Either there is no traffic or traffic is flowing without any collisions. If there is no Ethernet connection, the Ethernet Collision LED will remain unlit by default.</p> <p>An SNE2000G in Full Duplex mode does not have collisions; the Ethernet Collision LED is only applicable in Half Duplex mode.</p> |
|                            | Flashing Red    | Packet collision(s)                        | The Ethernet packet(s) will automatically be retransmitted.                                                                                                                                                                                                                                                      |
|                            | Solid Red       | Warning                                    | There is a potential traffic problem over the Ethernet segment.                                                                                                                                                                                                                                                  |
| Ethernet Rx                | Flashing Amber  | Ethernet activity                          | The SNE2000G is receiving data from the Ethernet network.                                                                                                                                                                                                                                                        |
|                            | Solid Amber     | Heavy Rx traffic                           | The SNE2000G is receiving large amounts of data from the Ethernet network. A solid amber Ethernet Rx LED can also signify a lost SHDSL connection.                                                                                                                                                               |
|                            | No Illumination | No activity                                | Either there is no Ethernet link or a link exists but there is no activity.                                                                                                                                                                                                                                      |

**Table 3. LEDs (2 of 2)**

| <b>LED</b>   | <b>STATE</b>    | <b>INDICATION</b>                  | <b>ADDITIONAL INFORMATION</b>                                                                                                                           |
|--------------|-----------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ethernet Tx  | Flashing Amber  | Ethernet activity                  | The SNE2000G is transmitting data across the Ethernet network.                                                                                          |
|              | Solid Amber     | Heavy Tx traffic                   | The SNE2000G is transmitting large amounts of data across the Ethernet network. A solid amber Ethernet Tx LED can also signify a lost SHDSL connection. |
| Ethernet Lnk | Solid Green     | Ethernet connection is established | A solid green Ethernet Lnk LED can also signify a lost SHDSL connection.                                                                                |
|              | No Illumination | No Ethernet connection             | The Ethernet Rx and Tx LEDs will remain unlit by default.                                                                                               |

\* A pulsing LED blinks steadily at a rate of once per second. A flashing LED blinks at a more rapid, less constant rate.


NOTE: If the SHDSL connection loses link, the Ethernet connection will automatically be disabled (as indicated by solid illumination of the Ethernet Rx, Tx and Lnk LEDs). Upon reestablishment of at the SHDSL link, the Ethernet connection will be reinstated and the Ethernet LEDs will reflect current Ethernet status.

# RJ45 Pin Assignments

## SHDSL RJ45 Pin Assignments

Table 4. SHDSL RJ45 Pin Assignments


| Pin | Function |
|-----|----------|
| 1   | not used |
| 2   | not used |
| 3   | not used |
| 4   | Ring     |
| 5   | Tip      |
| 6   | not used |
| 7   | not used |
| 8   | not used |

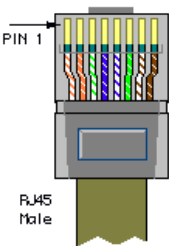

## Ethernet RJ45 Pin Assignments

Table 5. Ethernet RJ45 Pin Assignments

| Pin   | Function |
|-------|----------|
| Pin 1 | Rx+      |
| Pin 2 | Rx-      |
| Pin 3 | Tx+      |
| Pin 4 | not used |
| Pin 5 | not used |
| Pin 6 | Tx-      |
| Pin 7 | not used |
| Pin 8 | not used |

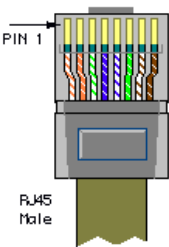

---

## **EMI Notices**

### **United States – EMI Notice**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The authority to operate this equipment is conditioned by the requirements that no modifications will be made to the equipment unless the changes or modifications are expressly approved by Paradyne Corporation.

If the equipment includes a ferrite choke or chokes, they must be installed as described in the installation instructions.

### **Canada – EMI Notice**

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## **ACTA Customer Information**

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the network extender is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. See installation instructions for details.

If the network extender causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

---

If trouble is experienced with this equipment, please contact your local sales representative, service representative, or distributor directly for any help needed. For additional information concerning warranty, sales, service, repair, installation, documentation, training, distributor locations, or Paradyne worldwide office locations, use one of the following methods:

- Internet: Visit the Paradyne World Wide Web site at [www.paradyne.com](http://www.paradyne.com). (Be sure to register your warranty at [www.paradyne.com/warranty](http://www.paradyne.com/warranty).)
- Telephone: Call our automated system to receive current information by fax or to speak with a company representative.
  - Within the U.S.A., call 1-800-795-8004
  - Outside the U.S.A., call 1-727-530-2340

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

The customer may make no repairs to the equipment.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

## Supplier's Declaration of Conformity

Place of Issue: Paradyne Corporation  
8545 126th Avenue North  
Largo, FL 33773-1502  
USA

Date of Issue: 7/14/2005

Paradyne Corporation, located at the above address, hereby certifies that the Model SNE2020G-P, Model SNE2020G-S, Model SNE2000G-P, and Model SNE2000G-S bearing labeling identification number US:AW2DLNANSNE2020 complies with: the Federal Communications Commission's ("FCC") Rules and Regulations 47 CFR Part 68, and the Administrative Council on Terminal Attachments ("ACTA")-adopted technical criteria TIA-968-A, "Telecommunications - Telephone Terminal Equipment -Technical Requirements for Connection of Terminal Equipment To the Telephone Network, October 2002," as amended by ANSI/TIA-968-A-3 2004, "Telecommunications - Telephone Terminal Equipment -Technical Requirements for Connection of Terminal Equipment to the Telephone Network - Addendum 3."



Patrick Murphy  
Senior Vice President, Chief Financial Officer

---

## Notice to Users of the Canadian Telephone Network

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation IC before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is labeled on the equipment. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

If your equipment is in need of repair, contact your local sales representative, service representative, or distributor directly.

## CE Marking

When the product is marked with the CE mark on the equipment label, a supporting Declaration of Conformity may be downloaded from the Paradyne World Wide Web site at [www.paradyne.com](http://www.paradyne.com). Select *Library* → *Technical Manuals* → [CE Declarations of Conformity](#).

## Japan Notice

### Class A ITE

|                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|
| この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 |
|-------------------------------------------------------------------------------------------------------------------------|

This is a Class A product based on the standard of the Voluntary Control Council for interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

---

## Important Safety Instructions

1. Read and follow all warning notices and instructions marked on the product or included in the manual.
2. Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these slots and openings must not be blocked or covered.
3. Do not allow anything to rest on the power cord and do not locate the product where persons will walk on the power cord.
4. Do not attempt to service this product yourself, as opening or removing covers may expose you to hazardous voltage or to other risks. Refer all servicing to qualified service personnel.
5. General purpose cables are used with this product for connection to the network. Special cables, which may be required by the regulatory inspection authority for the installation site, are the responsibility of the customer. Use a UL Listed, CSA certified, minimum No. 26 AWG line cord for connection to the Digital Subscriber Line (DSL) network.
6. When installed, the product must comply with the applicable Safety Standards and regulatory requirements of the country in which it is installed. If necessary, consult with the appropriate regulatory agencies and inspection authorities to ensure compliance.
7. A rare phenomenon can create a voltage potential between the earth grounds of two or more buildings. If products installed in separate buildings are **interconnected**, the voltage potential may cause a hazardous condition. Consult a qualified electrical consultant to determine whether or not this phenomenon exists and, if necessary, implement corrective action prior to interconnecting the products.
8. Input power to this product must be provided by one of the following: (1) a UL Listed/CSA certified power source with a Class 2 or Limited Power Source (LPS) output for use in North America, or (2) a certified power source, with a Safety Extra Low Voltage (SELV) output having a maximum of 240 VA available, for use in the country of installation.
9. In addition, since the equipment is to be used with telecommunications circuits, take the following precautions:
  - Never install telephone wiring during a lightning storm.
  - Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
  - Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
  - Use caution when installing or modifying telephone lines.
  - Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
  - Do not use the telephone to report a gas leak in the vicinity of the leak.



\*SNE2-A2-GN13-00\*